Option of the state of the stat

Somaiya Vidyavihar University

K. J. Somaiya College of Engineering, Vidyavihar, Mumbai 400077.

Department of Science and Humanities Applied Chemistry Laboratory Subject: Engineering Chemistry



Batch:	Roll No.:	
Date		

Experiment No.

Title: MOISTURE CONTENT

<u>Aim</u>: To determine the moisture content in the given coal sample

Requirement: Porcelain crucible, silica crucible, finely ground charcoal powder, oven, Desiccator, Balance, fractional weight box.

Theory

: Moisture and volatile matter is an undesirable component of mined coal. It is bought and transported at the cost of fuel. It does not contribute to calorific value but actually reduces it. Moisture can be surface moisture which is lost on just drying. However inherent moisture is not lost by air drying.


Procedure

: To determine inherent moisture, air dried coal is crushed (which can pass through mesh No.60 (ASTM). Initially weigh empty crucible along with lid. Note down the weight. Then weigh about 1 gm of sample in a crucible. Put the lid on the crucible and weigh it again. Note down the weight again. Keep this crucible in an oven maintained at a temperature between 105-110°C. The lid is removed to allow for the evaporation of moisture. Keep it for 1hour in an oven. After 1hour, the crucible is covered with the lid and transferred to a desiccator for cooling. After cooling the crucible is weighed again. Note down the weight.

Somaiya Vidyavihar University K. I. Somaiya College of Engineering, Vidyavih



K. J. Somaiya College of Engineering, Vidyavihar, Mumbai 400077.

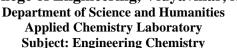



Observation

Weight of empty crucible = $W_1 g = g$

Weight of Crucible + Coal = $W_2 g =$ g

Weight of sample before drying $= W_2 - W_1 g$

= g

Weight of crucible + sample = $W_3 g = g$

after heating at 100° for 60 min

Weight of sample after heating $= W_{3-}W_1 g$

g

Calculations:

Loss in weight $= W_2 - W_1 - (W_3 - W_1)$ $= W_2 - W_3 g$

= g

% moisture = Loss in weight x100 Wt of sample taken

 $= \frac{W_2 - W_3}{W_2 - W_1} \times 100$

= ______ %

Result

:

Percentage of moisture in the given charcoal powder=_____%